

# **LCD-TFT MONITOR KIT**

## **LM6005**

### **USER MANUAL LM6005D11**

Edition 01  
Jan 2005



**KROMA** TELECOM

Pol. Ind. Alcobendas - C/ La Granja, 80  
28108 Madrid - ESPAÑA  
Tel. (34-91) 661 45 14  
Fax. (34-91) 661 58 75

e-mail: [sales@kromatelecom.com](mailto:sales@kromatelecom.com) Web: <http://www.kromatelecom.com>

1. General Description.....	3
2. Technical Specifications .....	4
2.1. System .....	4
2.2. Picture Presentation .....	4
2.3. TFT Screen .....	4
2.4. PAL/NTSC Decoder .....	4
2.5. SDI Input .....	5
2.6. General.....	5
3. Use and Operativeness .....	7
3.1. Keyboard .....	7
3.1.1. Screen Selection .....	8
3.1.2. Input Selection.....	8
3.1.3. Picture adjustments .....	9
3.1.4. Access to menu .....	10
3.2. Menu .....	11
3.2.1. Status Menu .....	11
3.2.2. Memory Recall Menu.....	11
3.2.3. Memory Store Menu .....	11
3.2.4. Setup Menu .....	12
3.2.4.1. Calibration Values Menu .....	12
3.2.4.2. Cal With Active Data.....	13
3.2.5. Password Menu.....	13
3.2.6. Program Function Menu .....	13
3.2.7. Remote Menu.....	14
3.2.8. Configuration Values Menu .....	14
4. Installation .....	15
4.1. Mechanics .....	15
4.2. Power supply.....	15
4.3. CCVS Video Inputs .....	16
4.4. SDI Video Inputs .....	16
4.5. TALLY .....	16
4.6. Communications.....	17

## 1. General Description

LM6005 is a monitoring kit that consists of three TFT screens of 5" provided each of them with 2xPAL video inputs according to ITU-R-BT.470 (**LM6005A11 and LM6005A12**) and 2xSDI at 10 bits according to ITU-R BT.601, SMPTE 270 Mbit/s (**LM6005A11**). This equipment is rack-mountable into standard 19 inches. Its brackets are provided with a tilting feature that improves the viewing angle.

Above each TFT screen user will find a Tally led with double colour (red/yellow) that is activated by contact closure; its reduced size and lightness make it ideal for live broadcasting, CCU monitoring, OB vehicles, etc.

Operativeness is easy due to its front keyboard. Parameters are checked and adjusted thru its On-Screen Display (OSD) and controlled by microprocessor. This also allows the continuous software upgrade of the monitor.

This version of LM6005 has been improved with a new feature (Sleep Mode) that prolonges the timelife of the screen. It switches off automatically in case of lack of signal during a certain period of time (user-programmable). A keystroke or the connection of a signal would get the monitor back to its active status.

## 2. Technical Specifications

### 2.1. System

- System:           625/50/2:1      CCVS PAL  
                      525/60/2:1      CCVS NTSC
- Horizontal frequency:   15.625Hz (625/50)  
                                  15.734Hz (525/60)

### 2.2. Picture Presentation

- Aspect Ratio:   4:3
- Resolution:     > 280 líneas
- Colour Temperature:   6500° K  $\pm 200^\circ$

### 2.3. TFT Screen

- Size:   5" (diagonal)
- Resolution: 960x234 dots
- Active area: 102.72(H) x 74.53(V) mm
- Dot pitch:   0.107(H) x 0.319(V) mm
- Pixel Configuration: stripe
- Dimensions: 127.4(W) x 92.8(H) x 12.9(D) (typ.) mm
- Weight: 164 $\pm$ 10 g

### 2.4. PAL/NTSC Decoder

- CCVS inputs
  - ✓ Level: 1 Vpp +3/-6 dB
  - ✓ Impedance: 75 $\Omega$   $\pm 1\%$
- Return Loss:   > 35 dB @ 5 MHz
- Crosstalk:   > 60 dB @ 10 MHz.

## 2.5. SDI Input

- Specifications

- ✓ Component Demultiplexing and Synchronizing according to Rec.601 & Rec.656 of CCIR.
- ✓ Input Impedance:  $75\Omega \pm 1\%$
- ✓ Return Loss:  $> 15 \text{ dB}$  @ 270 MHz
- ✓ Frequency response: 0 – 5,5 Mhz.  $< 0,5 \text{ dB}$
- ✓ Tilt (V):  $< 0,5 \%$
- ✓ Factor K:  $K_p < 0,3 \%$   
 $K_{pb} < 0,2 \%$
- ✓ Low frequency distortion:  $< 1 \%$
- ✓ Component mismatching:
  - Gain:  $< 0,1 \%$
  - Delay:  $< 3 \text{ ns}$

## 2.6. General

- Power Supply

- ✓ External.-
  - Input: 100-240 V ~ 1,3 A  
50-60 Hz
  - Output: máx. 45W  
+5V / 5 A  
+12V / 3 A  
-12V / 0.5 A

- Power Consumption

LM6005A12 (PAL):	21 W
LM6005A11 (DIG):	37 W

- Dimensions


High	Wide	Deep
118 mm	440 mm	60 mm

- Weight

LM6005-A12 (PAL):	2,5 Kg
LM6005-A11 (DIG):	2,65 Kg


### 3. Use and Operativeness

See below the fron panel of LM6005. It consists of three screen for monitoring purposes, each of them with the tally led. On the right side user will find the function keys and the ON/OFF switch with its power led.

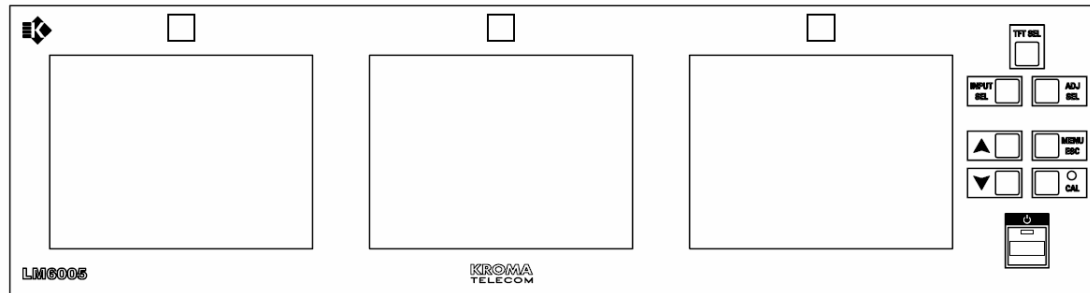

Picture 3.1 Front panel

#### 3.1. Keyboard

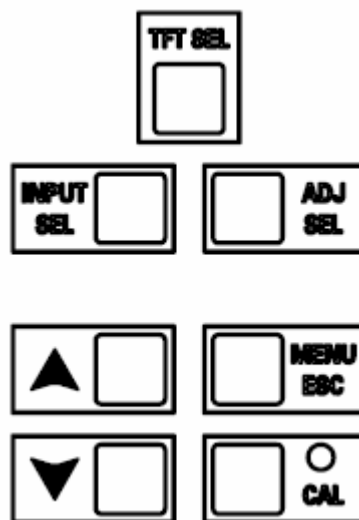


Picture 3.2 Keyboard


### 3.1.1. Screen Selection

User can adjust the parameters of one screen or the three of them at the same time<sup>1</sup>. Note that screen are numbered from 1 to 3 from left to right.

Use '**TFT SEL**' for selecting the desired screen. First keystroke will show the active screen. The following ones will vary the selected screen: first screen, second, third, all of them.

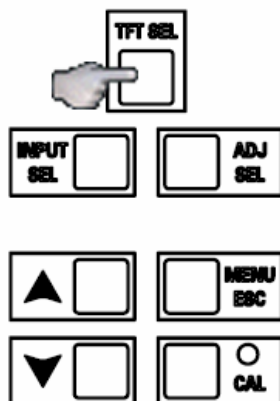

A message will appear on the upper side of the screen:

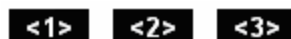

Picture 3.3 Screen selection



If the three screens are selected, every parameter adjustment will act on all of them.

After a few seconds (or by pressing '**MENU/ESC**' key), the message will disappear.




### 3.1.2. Input Selection

Input is selected thru '**INPUT SEL**' key. It follows this order:

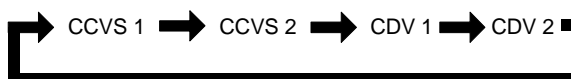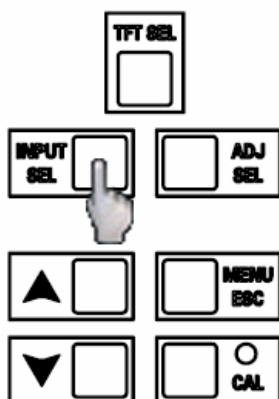

Picture 3.4 LM6005A11 Switching order

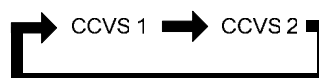

Picture 3.5 LM6005A12 Switching order<sup>2</sup>

First keystroke will show the active screen. The following ones will vary the video input as shown on the above pictures.

The active screen will tell which video input can be seen at that moment.



Picture 3.6 Input selection messages

<sup>1</sup> At switching on the equipment, all three screens are active/selected.

<sup>2</sup> LM6005A12 is not provided with SDI inputs.



If we select an input with no signal, a message as follows will appear on the left upper side of the screen:

**NO SYNC**



Picture 3.7 No signal message

After a few seconds (or by pressing '**MENU/ESC**' key), the message will disappear.




### 3.1.3. Picture adjustments

System allows user to adjust the following parameters: **black level**, **contrast**, **saturation** and **hue**. Just press '**ADJ SEL**' key as many times as needed to reach the desired parameter. See below the order:

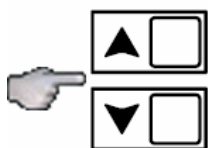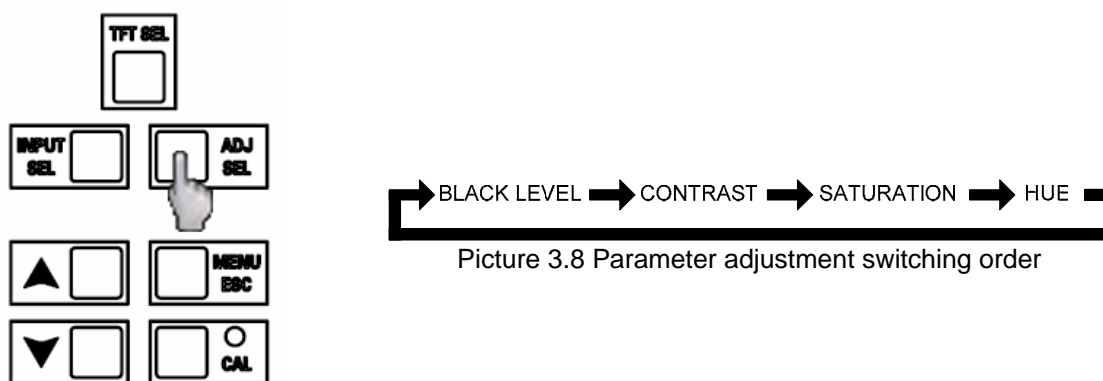

Press ▲ ▼ to change the desired parameter.

On the left lower side of the screen of the active screen a message will appear showing the parameter, its value and if it matches to its calibrated values (**CAL**). If not (**UNCAL**), the red led will be on. Press '**CAL**' to go back to the calibrated values of such parameter.<sup>3</sup>

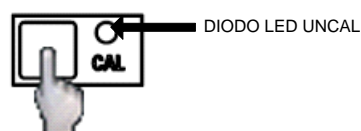


When all parameters have its values adjusted to the calibrated ones, the led will be off.



After a few seconds (or by pressing '**MENU/ESC**' key), the message will disappear.

<sup>3</sup> All the parameters are calibrated from factory.

### 3.1.4. Access to menu

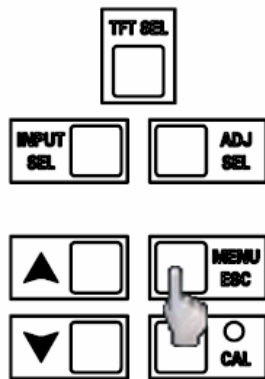


Press '**MENU/ESC**' to entre/exit the menu. See below for a detailed description of every feature.

## 3.2. Menu

Use ▲ ▼ to browse thru the menu. Press '**CAL**' to validate and '**MENU/ESC**' to exit. A flickering will indicate the active option.

Use ▲ ▼ for entering numeric codes such as passwords and net IDs. Again, use '**CAL**' to validate the desired digit.

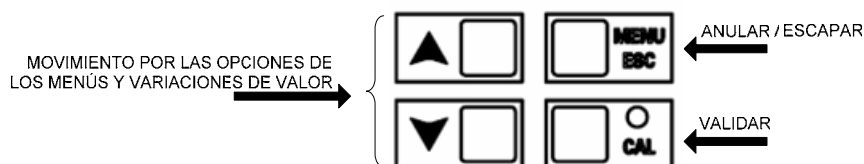


Picture 3.9 How to browse the menu thru the keyboard

### 3.2.1. Status Menu



Press shortly '**MENU/ESC**' to enter the main menu.


### 3.2.2. Memory Recall Menu

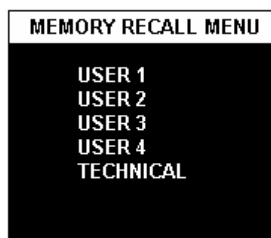

**MEMORY RECALL** menu allows the user to call the system values stored either by an user or by technical staff (user 1 – user 4 and technical).

Use ▲ ▼ to place on the desired memory and press '**CAL**' to load these values. A message on the process will appear, indicating also the outcome

(**DONE /ERROR**).

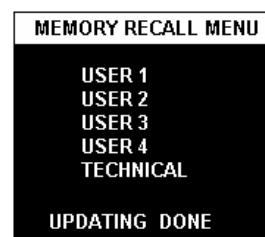

### 3.2.3. Memory Store Menu



**MEMORY STORE** menu allows the user to store the current values into the different available memories (user 1 – user 4, technical and all). Such values would be loaded thru **MEMORY RECALL** menu if necessary.

Use ▲ ▼ to place on the desired memory and press '**CAL**' to store.

Non-authorized users can be banned from modifying system values via password. If user enters the wrong password, she will be taken right back to **MEMORY STORE** menu. A message on the process will appear, indicating also the outcome (**DONE /ERROR**).

MEMORY STORE MENU	MEMORY STORE MENU
USER 1	USER 1
USER 2	USER 2
USER 3	USER 3
USER 4	USER 4
TECHNICAL	TECHNICAL
ALL MEM.	ALL MEM.
STORING DONE	PASSWORD: 0---

NB: Technical memory cannot be modified. That way factory values will be always available. **ALL MEM.** can be used only by technical staff.

### 3.2.4. Setup Menu

**SETUP** menu allows the user to change system values such as:

PASSWORD REQUIRED
SYSTEM PASSWORD: 0---

Calibration values (**CALIBRATION VALUES**).

To calibrate with current values (**CAL WITH ACTIVE DATA**).

This menu is password-protected to prevent unauthorized users from accessing this critical menu.

SETUP MENU
CALIBRATION VALUES
CAL WITH ACTIVE DATA

#### 3.2.4.1. Calibration Values Menu

CALIBRATION VALUES MENU		
	ACT	CAL
BLK:	20	20
CNT:	25	25
SAT:	45	45
HUE:	40	40


**CALIBRATION VALUES** menu allows variation of black level, contrast, saturation and hue.

Use **▲ ▼** keys to select the parameter to modify and then press '**CAL**'. Use again **▲ ▼** keys to change the its values and press '**CAL**' to validate or '**MENU/ESC**' key to exit (which


keeps the value unchanged).

### 3.2.4.2. Cal With Active Data

This option allows the user to calibrate the equipment with the current values. Just press '**CAL**'. A message on the process will appear, indicating also the outcome (**DONE** /**ERROR**).

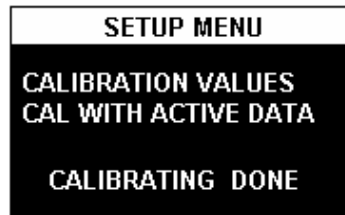



### 3.2.5. Password Menu

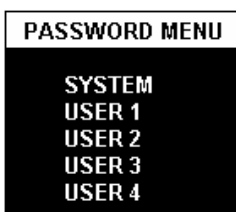


This menu is aimed at changing user and system passwords.

Use ▲ ▼ keys to select the new numeric password and then press '**CAL**' to validate.

Old password will always be requested: If right, user might enter the new one, which must be entered again. If not, she will be taken right back to the menu (which keeps the old password unchanged).

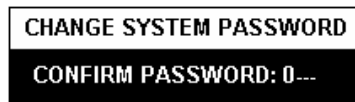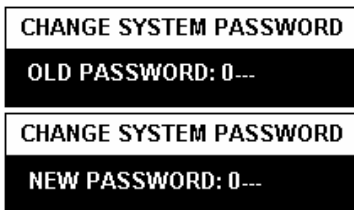

### 3.2.6. Program Function Menu

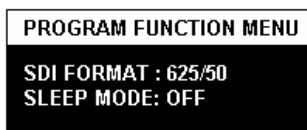


**PROGRAM FUNCTION** menu allows to programme the following features:

**SDI FORMAT:** for switching between SDI signals (625/50 or 525/60). Just press '**CAL**'.

**SLEEP MODE:** for automatically switching off the screen when no activity detected. This improves the lifetime of the screen. If no signal is detected or key pressed, a 3-minute timer will switch off the screen. Just press '**CAL**' to activate/deactivate.

If on, a message on the remaining time will appear.

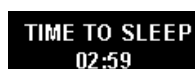

### 3.2.7. Remote Menu

REMOTE MENU
ID: 001

remote equipment.

**REMOTE** menu will help us identify each screen in order to remotely control each parameter of it (thru RK5000<sup>4</sup>). Otherwise user might prefer to assign one ID to the three screens<sup>5</sup>. The range for the IDs is from 0 to 254, so up to 255 screens can be controlled from this

Press '**CAL**' to modify the ID. Use ▲ ▼ keys to select the numeric code and then press '**CAL**' to validate.

### 3.2.8. Configuration Values Menu

CONFIGURATION VALUES MENU					
LM6005. OPTIONS: CCVS. SDI					
SW VERSION: 2.08.0000					
-----					
	ACT	CAL		ACT	CAL
BLK:	20	20	SAT:	45	45
CNT:	20	20	HUE:	40	40

**CONFIGURATION VALUES** menu can be entered by a long keystroke to '**MENU/ESC**' key. This can be done anytime and at any status. It will show the current configuration of the equipment. See below the different parameters displayed:

**OPTIONS:** It shows the activated options:

CCVS: Two composite video inputs (CCVS A and B).

SDI: Two SDI video inputs (S1 and S2).

**SW VERSION:** installed software version. Note that they are upgradable<sup>6</sup>.

**PARAMETERS:** With its current and calibration values.

<sup>4</sup> For more info on RK5000, read its user manual.

<sup>5</sup> Note that 000, 001 and 002 are screens' IDs from factory.


<sup>6</sup> Ask your supplier.

## 4. Installation

### 4.1. Mechanics

LM6005 fits a standard 19-inch rack. It is 118mm high, slightly less than 3RU so that it can tilt for increasing the viewing angle. Its brackets turn on themselves in several steps up to  $\pm 25^\circ$ .

On its rear panel it can be found: BNC connectors for the video inputs, plug for external power supply, two RJ45 connectors for the remote feature explained above and the SubD for the tally leds.

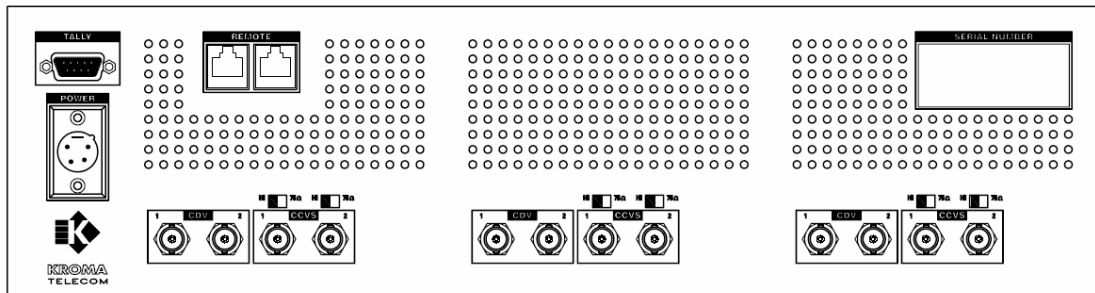


Picture 4.1 Rear panel

### 4.2. Power supply

Each LM6005 is provided with an external power supply that delivers three voltages:

Input: 110-240 Vac ~ 1.3A Max, 50-60 Hz  
 Output: +5 Vdc/5.0A  
 -12 Vdc/0.5A  
 +12 Vdc/3.0A


Power supply cable is 1,5m long, provided with a 4-pin XLR connector with locks to avoid accidental disconnections. See below the pinout of the rear connector:

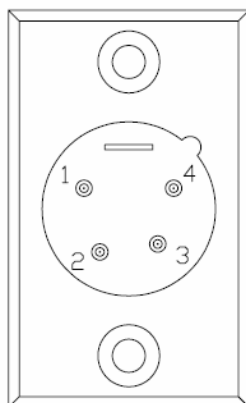

Pin 1: GND  
 Pin 2: -12Vdc/0.5A  
 Pin 3: +5Vdc/5.0A  
 Pin 4: +12Vdc/3.0A


### 4.3. CCVS Video Inputs

For each monitor screen, there are associate two BNC connectors for composite video inputs. A switch for 75 Ohm termination or loop-through purpose is provided.

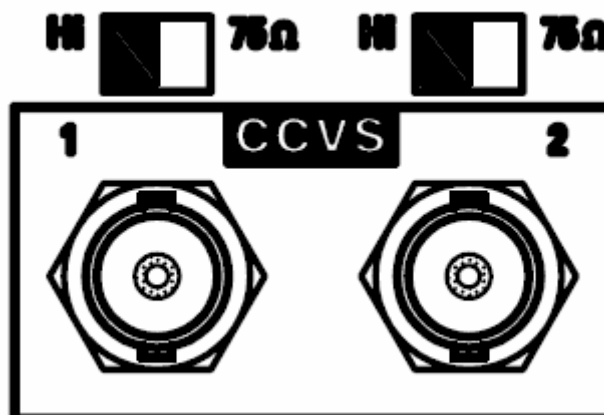


### 4.4. SDI Video Inputs

Also two BNC connectors intended for SDI video inputs are terminated with 75 Ohm load in order to get the return loss proper to this type of interface.

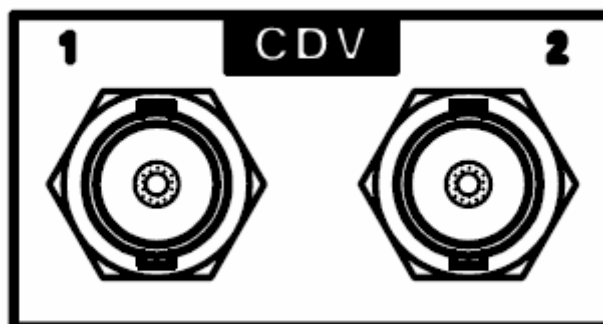

### 4.5. TALLY

Each screen is provided with a double-colour tally led (red/yellow), which is activated by contact closure to ground. See below the pinout of the SUB-D connector:

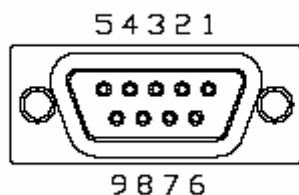


PIN 1:	Red (Screen 1)
PIN 2:	GND
PIN 3:	Red (Screen 2)
PIN 4:	Red (Screen 3)
PIN 5:	No Connection
PIN 6:	Yellow (Screen 1)
PIN 7:	No Connection
PIN 8:	Yellow (Screen 2)
PIN 9:	Yellow (Screen 3)



## 4.6. Communications

LM6005 is provided with two RJ45 connectors (8 pins) for managing the equipment remotely thru KROMA RK5000. This device can remotely control all the parameters of a monitoring panel of KROMA TFT monitors.

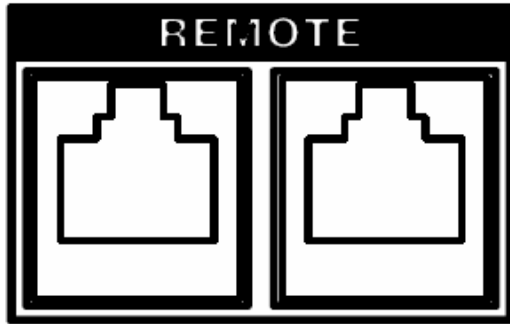

They are two connectors for looping purposes. Pinout must be 1:1. Interface is of RS485 type.